


REPLACEMENT

HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

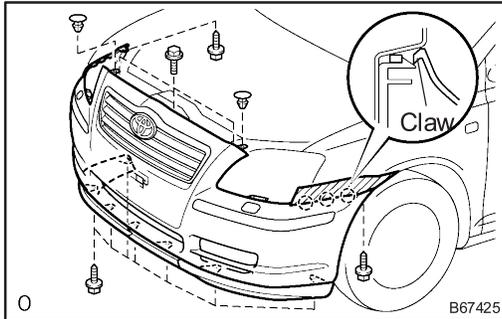

1. REMOVE FRONT BUMPER COVER

- (a) Put protective tape under the front fender.

HINT:


Because the spoiler covers LH and RH are assembled, remove them together.

- (b) Remove the spoiler.
- (1) Remove the 9 screws and 6 claws.
 - (2) Remove the 6 retainers.
 - (3) Remove the spoiler covers LH and RH together.
 - (4) Remove the bolt and separate the spoiler cover RH from the LH.
- (c) Remove the 3 bolts and 2 clips.
- (d) Using a screwdriver, disengage the 6 claws and remove the bumper cover.

HINT:

Tape the screwdriver tip before use.

- (e) w/ Fog lamp:
Disconnect the fog lamp connectors.

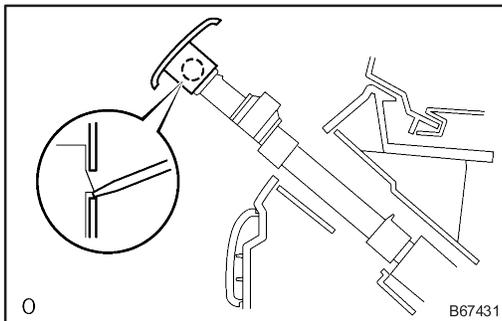

2. REMOVE HEADLAMP WASHER ACTUATOR SUB-ASSY LH (W/ HEADLAMP CLEANER)

- (a) Remove the washer hose clip.
- (b) Using a screwdriver, pry out the front washer nozzle.

HINT:

- Tape the screwdriver tip before use.
- (c) Remove the 2 screws and actuator.

3. REMOVE HEADLAMP WASHER ACTUATOR SUB-ASSY RH (W/ HEADLAMP CLEANER)

HINT:

Use the same procedures described for the LH side.

4. REMOVE INTERCOOLER COOLING AIR DUCT SUB-ASSY (W/ CAC 1CD-FTV ENGINE TYPE)

- (a) Remove the 3 screws and air duct.

5. REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSY

- (a) Using a screwdriver, remove the wire harness.
- (b) Remove the 8 bolts and reinforcement.

6. REMOVE FRONT BUMPER SIDE RETAINER LH

- (a) Using a screwdriver, remove the 2 screws and retainer.

HINT:

Tape the screwdriver tip before use.

7. REMOVE FRONT BUMPER SIDE RETAINER RH

HINT:

Use the same procedures described for the LH side.

8. REMOVE FRONT BUMPER STAY SUB-ASSY LH

(a) Remove the 2 bolts and stay.

9. REMOVE FRONT BUMPER STAY SUB-ASSY RH

(a) Remove the 2 bolts and stay.

10. REMOVE FOG LAMP ASSY LH (W/ FOG LAMP)

(a) Remove the 2 screws and fog lamp.

11. REMOVE FOG LAMP ASSY RH (W/ FOG LAMP)

(a) Remove the 2 screws and fog lamp.

12. REMOVE FRONT BUMPER HOLE COVER LH**13. REMOVE FRONT BUMPER HOLE COVER RH****14. REMOVE FRONT BUMPER SIDE MOULDING LH**

(a) Using a screwdriver, disengage the 9 claws and remove the retainer.

HINT:

Tape the screwdriver tip before use.

15. REMOVE FRONT BUMPER SIDE MOULDING RH

HINT:

Use the same procedures described for the LH side.

16. REMOVE HOOD TO FRONT END PANEL SEAL

(a) Using a screwdriver, remove the 10 clips and panel seal.

HINT:

Tape the screwdriver tip before use.

17. REMOVE RADIATOR GRILLE

(a) Using a screwdriver, disengage the 13 claws and remove the 2 screws and radiator grille.

HINT:

Tape the screwdriver tip before use.

18. REMOVE RADIATOR GRILLE LOWER

(a) Using a screwdriver, disengage the 10 claws and remove the grille lower.


HINT:

Tape the screwdriver tip before use.

19. INSTALL FRONT BUMPER REINFORCEMENT SUB-ASSY

(a) Install the reinforcement with the 8 bolts.

(b) Install the wire harness.

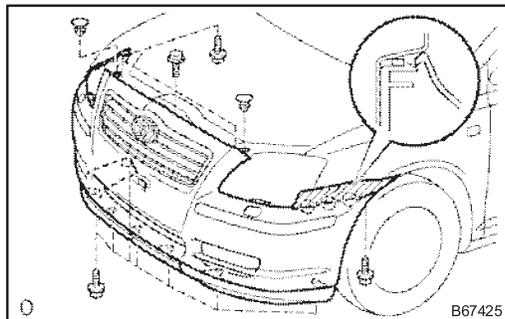**20. INSTALL FRONT BUMPER COVER**

(a) w/ Fog lamp:

Connect the fog lamp connector.

(b) Engage the 6 claws and install the bumper cover.

(c) Install the 3 bolts and 2 clips.

(d) Install the spoiler.

(1) Install the spoiler covers LH and RH together.

(2) Install the 6 retainers.

(3) Install the 9 screws and 10 claws.